



**BELT-DRIVEN OIL
AIR COMPRESSOR
OWNER'S MANUAL**

**CALIFORNIA AIR TOOLS
80050BD**

5.0 HP 208v/230v 1-Phase 60hz

17.5 CFM @ 40 PSI, 15.0 CFM @ 90 PSI

80 GALLON ASME STEEL TANK: 165 PSI



TABLE OF CONTENTS

INTRODUCTION	2
IMPORTANT SAFETY INSTRUCTIONS	3
LOCATIONS OF IMPORTANT LABELS	6
AIR COMPRESSOR COMPONENTS	7
PRE-OPERATION CHECKLIST	8
Package Contents & Assembly	8
Inspect for Damage	9
Save Packaging	9
Compressor Location	9
Electrical Power	10
OPERATING THE AIR COMPRESSOR	10
Introduction	10
Assembly	10
Test Run	11
Daily Operation	11
MAINTENANCE	12
Draining the Air Tank	12
Changing the Air Filter	12
Testing for Leaks	12
Pressure Switch	12
Cleaning	12
STORAGE	12
TROUBLESHOOTING	13
SPECIFICATIONS	14
Electrical Circuit	14
Air Passage Drawing	14
WARRANTY	15

INTRODUCTION

WARNING

This manual contains important instructions for operating this product. For your safety, and the safety of others, be sure to read this manual thoroughly before operating the product.

Failure to properly follow all the instructions and precautions can cause you and others to be seriously hurt or killed.

Thank you for purchasing a California Air Tools, Inc. Air Compressor.

Please contact us if you have any questions.

Record the model and serial numbers indicated on your air compressor's nameplate:

Model No. _____

Serial No. _____

Date of Purchase: _____

Store/Dealer: _____

How to find a local service center:

Even quality built equipment might need service or repair parts. Contact the California Air Tools Customer Service Department:

Phone: 1-866-409-4581

Online: WWW.CALIFORNIAAIRTOOLS.COM

Please provide the information below:

Model number and Serial number and specifications shown on the Model number/Serial number plate.

Part number or numbers shown in the parts list section of the owner's manual for your air compressor model.

A brief description of the trouble with the air compressor.

Do not return your air compressor for service or parts to the store/dealer where purchased.

IMPORTANT SAFETY INSTRUCTIONS

Safety Messages & Signal Words:

⚠ DANGER

Indicates an immediate hazardous situation which, if not avoided, will result in death or serious injury to the operator or to bystanders.

⚠ WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury to the operator or to bystanders.

⚠ CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in moderate or minor injury to the operator or to bystanders.

NOTICE

Indicates a situation which, if not avoided, may result in damage to product components or other property.

⚠ DANGER



RISK OF CUTTING

Moving parts can cause severe trauma.

Keep hands and feet away from rotating parts, tie up long hair, remove jewelry, and DO NOT wear loose clothing.

⚠ DANGER



SHOCK

There is a danger of electric shock.

Use only undamaged electrical cords.

DO NOT touch bare wires or receptacles.

DO NOT operate air compressor in wet weather or in wet conditions.

DO NOT touch air compressor or cords if hands or feet are wet.

Ensure that all cords are free of damage before connecting to the power supply.

Ensure that you have a sufficient electrical supply for supporting the requirements of the motor.

Improper installation of the grounding plug is able to result in a risk of electric shock. When repair or replacement of the cord or plug is required, do not connect the grounding wire to either flat terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

This product must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electric current.

This product is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with the local codes and ordinances.

⚠ WARNING



RISK TO BREATHING

Dust or dust-like particulates caused by power-sanding, sawing, grinding, drilling or any other construction-like activities can contain contaminants that are harmful to breathe.

Always use your air compressor in a well-ventilated and clean area.

Never breathe the air that comes directly out of the air compressor or air hose. This air is not suitable for breathing.

Always wear approved safety equipment. When performing dust-creating activities, securely wear properly-fit face masks or respirators.

If you feel ill from breathing while operating your air compressor, stop and seek medical attention immediately.

⚠ WARNING



FLYING OBJECTS

Flying object can cause injury to the eyes, head and other parts of the body.

Air-powered equipment and power tools are capable of propelling items (metal chips, fasteners and particulates) at high speed into the air and could result in injury.

Always wear approved head and eye protection.

Never point the air stream at any part of the body, or at another person or animal.

When operating the air compressor, make sure all other people and animals maintain a safe distance.

Do not move the air compressor when the air tank is under pressure.

Never use the air hoses to pull or move the air compressor.

Keep the air compressor on a flat surface.

⚠ WARNING



HOT SURFACE



FIRE

Air compressor surfaces become hot during operation.

DO NOT touch hot surfaces, because they can cause severe burns.

Do not touch the air compressor's cylinder head. During operation, the cooling fins of the cylinder head and delivery pipe become hot.

Allow the air compressor to cool before touching it.

DO NOT place a storage cover on the unit during operation. Only place a cover on the air compressor after it has thoroughly cooled down.

⚠ WARNING



EXPLOSION

Exercise caution when using pressurized air.

To prevent injury and for your general safety, only use high-pressure hoses, fittings and couplings designed for use with air compressors.

Inspect all hoses, fittings and couplings for leaks and wear. When leaks and wear detected, stop use and replace those items immediately. Do not repair.

Never leave pressurized air in the air tank when performing maintenance.

Never leave air compressor unattended with the power supply in use and the air hose connected.

⚠ WARNING



EXPLOSION

Improper care could lead to the air tank bursting or exploding.

Drain air tank daily or after each use to prevent moisture buildup in the air tank.

Rust can weaken the air tank and cause leaks or bursting. If rust is detected, replace tank immediately. Do not try to repair the air tank by welding, drilling or modifying it in any other way. These modifications can weaken the air tank and cause a hazardous condition.

If air tank develops a leak, replace the air tank immediately. Never repair, weld or make modifications to the air tank or its attachments.

Never make adjustments to the factory-set pressures.

Never exceed manufacturer's maximum-allowable pressure rating attachments.

Because of extreme heat, do not use plastic pipe or lead tin solder joints for a discharge line.


Power Requirements

- 208v/230v 60hz 24 Amp
(200 – 240 acceptable voltage range)
- 30 Amp breaker suggested
- Included NEMA L6-30P plug with 7 foot power cable. Connect to NEMA L6-30R electrical receptacle.



L6-30P Plug

L6-30R Electrical Receptacle
(30 ampere, 220 volts)

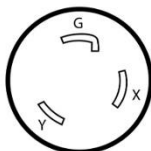

⚠ WARNING



EXPLOSION



FIRE

Use caution to minimize risk of fire or explosion.

It is normal for the air compressor motor and pressure switch to produce sparks while operating. If sparks come in contact with vapors from gasoline or solvents, they may ignite and cause a fire or explosion.

Abrasive tools such as grinders, drills and other tools are capable of making sparks that can ignite flammable materials.

Always operate the air compressor a safe distance away from flammable items. Use in well-ventilated areas.

Never exceed the maximum rated pressure.

⚠ CAUTION

Use caution when using extension cords.

Use an extension cord which is no more than 25' (7.6 m) long and at least 14 gauge.

Using an excessively long or thin-wired extension cord will cause severe damage to the motor.

Use only a 3-wire extension cord that has a 3-blade grounding plug.

As undersized cord results in a drop in the line voltage and loss of power and overheating.

When in doubt, use a heavier gauge. The smaller the gauge the more current the cord can carry.

⚠ CAUTION



THIS EQUIPMENT INCORPORATES PARTS, SUCH AS SNAP SWITCHES, RECEPTACLES AND THE LIKE THAT TEND TO PRODUCE ARCS OR SPARKS, THERE, WHEN LOCATED IN A GARAGE, IT SHOULD BE IN A ROOM OR ENCLOSURE PROVIDED FOR THE PURPOSE, OR SHOULD BE 18 IN (45.7 CM) OR MORE ABOVE THE FLOOR.







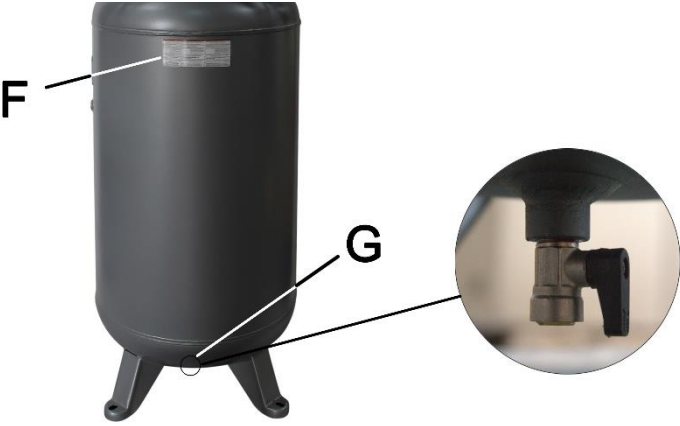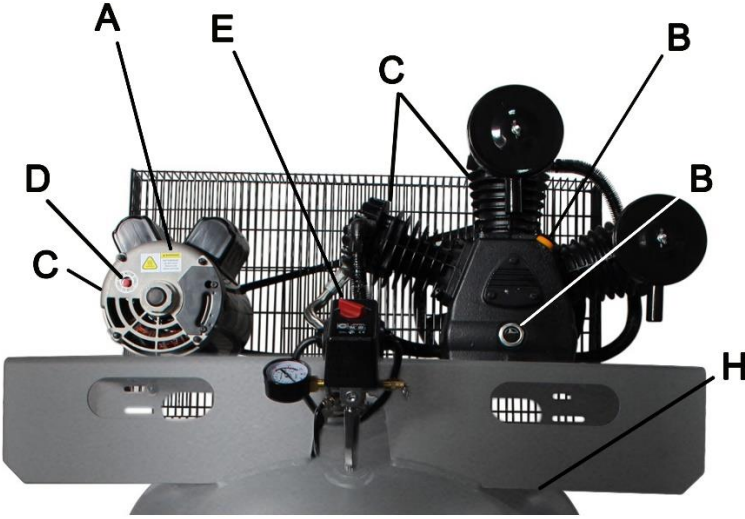


AIR COMPRESSOR

LOCATIONS OF IMPORTANT LABELS


Read these important labels before operating.

These labels provide important safety and maintenance information. These labels should be considered as permanent parts of the air compressor. Should any of these labels become illegible, damaged or removed, please contact California Air Tools Customer Service department at 1-866-409-4581 for replacements.

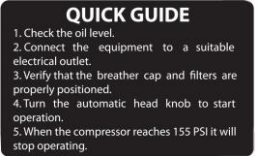

PRODUCT LABEL																						
A																						
B	 																					
C																						
D																						
E	 																					
F	 <p>ASME Certification</p>																					
G																						
H	<table border="1"> <thead> <tr> <th>WARNING</th> <th>ADVERTENCIA</th> <th>AVERTISSEMENT</th> </tr> </thead> <tbody> <tr> <td>BEFORE HANDLING, REFER TO THE USER MANUAL FOR SAFETY AND MAINTENANCE INFORMATION. ALWAYS WEAR APPROPRIATE PROTECTIVE EQUIPMENT. BEFORE PROTECTIVE HAZARDS SUCH AS ELECTRICAL SHOCK OR MOVING PARTS. READ THE USER MANUAL CAREFULLY BEFORE USING THE COMPRESSOR.</td> <td>ANTES DE MANEJAR, LEA EL MANUAL DEL USUARIO PARA OBTENER LA INFORMACIÓN DE SEGURIDAD Y MANTENIMIENTO. ANTES DE PROTECTORES PELIGROSOS COMO LA ELECTRICIDAD O PARTES EN MOVIMIENTO. LEA EL MANUAL DEL USUARIO CUIDADOSAMENTE ANTES DE USAR EL COMPRESOR.</td> <td>AVANT D'UTILISER LE COMPRESOR, LIREZ LA MANUELLE D'INSTRUCTIONS POUR OBTENIR LES INFORMATIONS DE SECURITE ET D'ENTRETIEN. AVANT DE PROTECTEURS DANGERS TEL QUE LE CHOC ELECTRIQUE OU LES PARTIES EN MOUVEMENT. LIJREZ LE MANUEL D'UTILISATEUR ATTENTIVEMENT AVANT D'UTILISER LE COMPRESOR.</td> </tr> <tr> <td>DO NOT OPERATE THE COMPRESSOR IN THE FOLLOWING SITUATIONS: 1. DO NOT OPERATE THE COMPRESSOR IN AN UNVENTILATED AREA. 2. DO NOT OPERATE THE COMPRESSOR IN A CORRUPTIBLE ENVIRONMENT. 3. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF EXPLOSION. 4. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FLOODING. 5. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF COLLAPSE. 6. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIRE. 7. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF LIGHTNING. 8. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF HAIL. 9. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF ICE. 10. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF WIND. 11. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF SAND. 12. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF DUST. 13. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIBERS. 14. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF TOXIC SUBSTANCES. 15. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF CORROSIVE SUBSTANCES.</td> <td>NO OPERAR EL COMPRESOR EN LAS SIGUIENTES SITUACIONES: 1. NO OPERAR EL COMPRESOR EN UN AREA SIN VENTILACION. 2. NO OPERAR EL COMPRESOR EN UN ENTORNO CORRUPTIBLE. 3. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE EXPLOSION. 4. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE INUNDACION. 5. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE COLAPSO. 6. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FUEGO. 7. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE RAYOS. 8. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE GRANIZO. 9. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE NIEVE. 10. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE VIENTO. 11. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE ARENA. 12. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE POLVOS. 13. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FIBRAS. 14. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS TOXICAS. 15. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS CORROSIVAS.</td> <td>NE PAS UTILISER LE COMPRESOR DANS LES SITUATIONS SUIVANTES: 1. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT NON VENTILE. 2. NE PAS UTILISER LE COMPRESOR DANS UN ENVIRONNEMENT CORRUPTIBLE. 3. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'EXPLOSION. 4. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INONDATION. 5. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE CHUTE. 6. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INCENDIE. 7. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE Foudre. 8. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE GRANDIN. 9. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE NEIGE. 10. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE VENT. 11. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SABLE. 12. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE POUSSIERE. 13. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE FIBRES. 14. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUBSTANCES TOXIQUES. 15. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUBSTANCES CORROSIVES.</td> </tr> <tr> <td>DO NOT OPERATE THE COMPRESSOR IN THE FOLLOWING SITUATIONS: 1. DO NOT OPERATE THE COMPRESSOR IN AN UNVENTILATED AREA. 2. DO NOT OPERATE THE COMPRESSOR IN A CORRUPTIBLE ENVIRONMENT. 3. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF EXPLOSION. 4. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FLOODING. 5. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF COLLAPSE. 6. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIRE. 7. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF LIGHTNING. 8. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF HAIL. 9. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF ICE. 10. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF WIND. 11. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF SAND. 12. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF DUST. 13. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIBERS. 14. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF TOXIC SUBSTANCES. 15. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF CORROSIVE SUBSTANCES.</td> <td>NO OPERAR EL COMPRESOR EN LAS SIGUIENTES SITUACIONES: 1. NO OPERAR EL COMPRESOR EN UN AREA SIN VENTILACION. 2. NO OPERAR EL COMPRESOR EN UN ENTORNO CORRUPTIBLE. 3. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE EXPLOSION. 4. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE INUNDACION. 5. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE COLAPSO. 6. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FUEGO. 7. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE RAYOS. 8. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE GRANIZO. 9. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE NIEVE. 10. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE VIENTO. 11. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE ARENA. 12. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE POLVOS. 13. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FIBRAS. 14. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS TOXICAS. 15. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS CORROSIVAS.</td> <td>NE PAS UTILISER LE COMPRESOR DANS LES SITUATIONS SUIVANTES: 1. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT NON VENTILE. 2. NE PAS UTILISER LE COMPRESOR DANS UN ENVIRONNEMENT CORRUPTIBLE. 3. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'EXPLOSION. 4. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INONDATION. 5. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE CHUTE. 6. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INCENDIE. 7. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE Foudre. 8. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE GRANDIN. 9. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE NEIGE. 10. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE VENT. 11. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SABLE. 12. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE POUSSIERE. 13. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE FIBRES. 14. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUSTANCIAS TOXIQUES. 15. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUSTANCIAS CORROSIVES.</td> </tr> <tr> <td>BEFORE OPERATING, CHECK THE OIL LEVEL AND ADD OIL AS NEEDED. BEFORE STARTING THE COMPRESSOR, CHECK THE OIL LEVEL.</td> <td>ANTES DE OPERAR, REVISAR EL NIVEL DE ACEITE Y AÑADIR ACEITE SI ES NECESARIO. ANTES DE ENCENDER EL COMPRESOR, REVISAR EL NIVEL DE ACEITE.</td> <td>AVANT D'UTILISER, VÉRIFIER LE NIVEAU D'HUILE ET AJUSTER SI BESOIN. AVANT DE METTRE LE COMPRESOR EN MARCHÉ, VÉRIFIER LE NIVEAU D'HUILE.</td> </tr> <tr> <td>DO NOT OPERATE THE COMPRESSOR IN THE FOLLOWING SITUATIONS: 1. DO NOT OPERATE THE COMPRESSOR IN AN UNVENTILATED AREA. 2. DO NOT OPERATE THE COMPRESSOR IN A CORRUPTIBLE ENVIRONMENT. 3. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF EXPLOSION. 4. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FLOODING. 5. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF COLLAPSE. 6. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIRE. 7. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF LIGHTNING. 8. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF HAIL. 9. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF ICE. 10. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF WIND. 11. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF SAND. 12. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF DUST. 13. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIBERS. 14. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF TOXIC SUBSTANCES. 15. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF CORROSIVE SUBSTANCES.</td> <td>NO OPERAR EL COMPRESOR EN LAS SIGUIENTES SITUACIONES: 1. NO OPERAR EL COMPRESOR EN UN AREA SIN VENTILACION. 2. NO OPERAR EL COMPRESOR EN UN ENTORNO CORRUPTIBLE. 3. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE EXPLOSION. 4. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE INUNDACION. 5. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE COLAPSO. 6. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FUEGO. 7. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE RAYOS. 8. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE GRANIZO. 9. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE NIEVE. 10. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE VIENTO. 11. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE ARENA. 12. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE POLVOS. 13. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FIBRAS. 14. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS TOXICAS. 15. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS CORROSIVAS.</td> <td>NE PAS UTILISER LE COMPRESOR DANS LES SITUATIONS SUIVANTES: 1. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT NON VENTILE. 2. NE PAS UTILISER LE COMPRESOR DANS UN ENVIRONNEMENT CORRUPTIBLE. 3. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'EXPLOSION. 4. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INONDATION. 5. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE CHUTE. 6. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INCENDIE. 7. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE Foudre. 8. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE GRANDIN. 9. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE NEIGE. 10. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE VENT. 11. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SABLE. 12. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE POUSSIERE. 13. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE FIBRES. 14. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUSTANCIAS TOXIQUES. 15. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUSTANCIAS CORROSIVES.</td> </tr> <tr> <td>BEFORE OPERATING, CHECK THE OIL LEVEL AND ADD OIL AS NEEDED. BEFORE STARTING THE COMPRESSOR, CHECK THE OIL LEVEL.</td> <td>ANTES DE OPERAR, REVISAR EL NIVEL DE ACEITE Y AÑADIR ACEITE SI ES NECESARIO. ANTES DE ENCENDER EL COMPRESOR, REVISAR EL NIVEL DE ACEITE.</td> <td>AVANT D'UTILISER, VÉRIFIER LE NIVEAU D'HUILE ET AJUSTER SI BESOIN. AVANT DE METTRE LE COMPRESOR EN MARCHÉ, VÉRIFIER LE NIVEAU D'HUILE.</td> </tr> </tbody> </table>	WARNING	ADVERTENCIA	AVERTISSEMENT	BEFORE HANDLING, REFER TO THE USER MANUAL FOR SAFETY AND MAINTENANCE INFORMATION. ALWAYS WEAR APPROPRIATE PROTECTIVE EQUIPMENT. BEFORE PROTECTIVE HAZARDS SUCH AS ELECTRICAL SHOCK OR MOVING PARTS. READ THE USER MANUAL CAREFULLY BEFORE USING THE COMPRESSOR.	ANTES DE MANEJAR, LEA EL MANUAL DEL USUARIO PARA OBTENER LA INFORMACIÓN DE SEGURIDAD Y MANTENIMIENTO. ANTES DE PROTECTORES PELIGROSOS COMO LA ELECTRICIDAD O PARTES EN MOVIMIENTO. LEA EL MANUAL DEL USUARIO CUIDADOSAMENTE ANTES DE USAR EL COMPRESOR.	AVANT D'UTILISER LE COMPRESOR, LIREZ LA MANUELLE D'INSTRUCTIONS POUR OBTENIR LES INFORMATIONS DE SECURITE ET D'ENTRETIEN. AVANT DE PROTECTEURS DANGERS TEL QUE LE CHOC ELECTRIQUE OU LES PARTIES EN MOUVEMENT. LIJREZ LE MANUEL D'UTILISATEUR ATTENTIVEMENT AVANT D'UTILISER LE COMPRESOR.	DO NOT OPERATE THE COMPRESSOR IN THE FOLLOWING SITUATIONS: 1. DO NOT OPERATE THE COMPRESSOR IN AN UNVENTILATED AREA. 2. DO NOT OPERATE THE COMPRESSOR IN A CORRUPTIBLE ENVIRONMENT. 3. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF EXPLOSION. 4. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FLOODING. 5. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF COLLAPSE. 6. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIRE. 7. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF LIGHTNING. 8. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF HAIL. 9. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF ICE. 10. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF WIND. 11. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF SAND. 12. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF DUST. 13. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIBERS. 14. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF TOXIC SUBSTANCES. 15. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF CORROSIVE SUBSTANCES.	NO OPERAR EL COMPRESOR EN LAS SIGUIENTES SITUACIONES: 1. NO OPERAR EL COMPRESOR EN UN AREA SIN VENTILACION. 2. NO OPERAR EL COMPRESOR EN UN ENTORNO CORRUPTIBLE. 3. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE EXPLOSION. 4. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE INUNDACION. 5. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE COLAPSO. 6. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FUEGO. 7. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE RAYOS. 8. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE GRANIZO. 9. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE NIEVE. 10. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE VIENTO. 11. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE ARENA. 12. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE POLVOS. 13. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FIBRAS. 14. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS TOXICAS. 15. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS CORROSIVAS.	NE PAS UTILISER LE COMPRESOR DANS LES SITUATIONS SUIVANTES: 1. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT NON VENTILE. 2. NE PAS UTILISER LE COMPRESOR DANS UN ENVIRONNEMENT CORRUPTIBLE. 3. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'EXPLOSION. 4. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INONDATION. 5. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE CHUTE. 6. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INCENDIE. 7. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE Foudre. 8. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE GRANDIN. 9. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE NEIGE. 10. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE VENT. 11. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SABLE. 12. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE POUSSIERE. 13. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE FIBRES. 14. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUBSTANCES TOXIQUES. 15. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUBSTANCES CORROSIVES.	DO NOT OPERATE THE COMPRESSOR IN THE FOLLOWING SITUATIONS: 1. DO NOT OPERATE THE COMPRESSOR IN AN UNVENTILATED AREA. 2. DO NOT OPERATE THE COMPRESSOR IN A CORRUPTIBLE ENVIRONMENT. 3. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF EXPLOSION. 4. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FLOODING. 5. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF COLLAPSE. 6. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIRE. 7. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF LIGHTNING. 8. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF HAIL. 9. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF ICE. 10. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF WIND. 11. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF SAND. 12. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF DUST. 13. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIBERS. 14. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF TOXIC SUBSTANCES. 15. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF CORROSIVE SUBSTANCES.	NO OPERAR EL COMPRESOR EN LAS SIGUIENTES SITUACIONES: 1. NO OPERAR EL COMPRESOR EN UN AREA SIN VENTILACION. 2. NO OPERAR EL COMPRESOR EN UN ENTORNO CORRUPTIBLE. 3. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE EXPLOSION. 4. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE INUNDACION. 5. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE COLAPSO. 6. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FUEGO. 7. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE RAYOS. 8. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE GRANIZO. 9. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE NIEVE. 10. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE VIENTO. 11. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE ARENA. 12. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE POLVOS. 13. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FIBRAS. 14. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS TOXICAS. 15. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS CORROSIVAS.	NE PAS UTILISER LE COMPRESOR DANS LES SITUATIONS SUIVANTES: 1. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT NON VENTILE. 2. NE PAS UTILISER LE COMPRESOR DANS UN ENVIRONNEMENT CORRUPTIBLE. 3. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'EXPLOSION. 4. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INONDATION. 5. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE CHUTE. 6. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INCENDIE. 7. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE Foudre. 8. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE GRANDIN. 9. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE NEIGE. 10. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE VENT. 11. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SABLE. 12. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE POUSSIERE. 13. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE FIBRES. 14. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUSTANCIAS TOXIQUES. 15. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUSTANCIAS CORROSIVES.	BEFORE OPERATING, CHECK THE OIL LEVEL AND ADD OIL AS NEEDED. BEFORE STARTING THE COMPRESSOR, CHECK THE OIL LEVEL.	ANTES DE OPERAR, REVISAR EL NIVEL DE ACEITE Y AÑADIR ACEITE SI ES NECESARIO. ANTES DE ENCENDER EL COMPRESOR, REVISAR EL NIVEL DE ACEITE.	AVANT D'UTILISER, VÉRIFIER LE NIVEAU D'HUILE ET AJUSTER SI BESOIN. AVANT DE METTRE LE COMPRESOR EN MARCHÉ, VÉRIFIER LE NIVEAU D'HUILE.	DO NOT OPERATE THE COMPRESSOR IN THE FOLLOWING SITUATIONS: 1. DO NOT OPERATE THE COMPRESSOR IN AN UNVENTILATED AREA. 2. DO NOT OPERATE THE COMPRESSOR IN A CORRUPTIBLE ENVIRONMENT. 3. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF EXPLOSION. 4. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FLOODING. 5. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF COLLAPSE. 6. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIRE. 7. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF LIGHTNING. 8. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF HAIL. 9. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF ICE. 10. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF WIND. 11. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF SAND. 12. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF DUST. 13. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIBERS. 14. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF TOXIC SUBSTANCES. 15. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF CORROSIVE SUBSTANCES.	NO OPERAR EL COMPRESOR EN LAS SIGUIENTES SITUACIONES: 1. NO OPERAR EL COMPRESOR EN UN AREA SIN VENTILACION. 2. NO OPERAR EL COMPRESOR EN UN ENTORNO CORRUPTIBLE. 3. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE EXPLOSION. 4. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE INUNDACION. 5. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE COLAPSO. 6. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FUEGO. 7. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE RAYOS. 8. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE GRANIZO. 9. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE NIEVE. 10. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE VIENTO. 11. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE ARENA. 12. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE POLVOS. 13. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FIBRAS. 14. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS TOXICAS. 15. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS CORROSIVAS.	NE PAS UTILISER LE COMPRESOR DANS LES SITUATIONS SUIVANTES: 1. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT NON VENTILE. 2. NE PAS UTILISER LE COMPRESOR DANS UN ENVIRONNEMENT CORRUPTIBLE. 3. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'EXPLOSION. 4. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INONDATION. 5. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE CHUTE. 6. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INCENDIE. 7. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE Foudre. 8. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE GRANDIN. 9. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE NEIGE. 10. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE VENT. 11. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SABLE. 12. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE POUSSIERE. 13. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE FIBRES. 14. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUSTANCIAS TOXIQUES. 15. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUSTANCIAS CORROSIVES.	BEFORE OPERATING, CHECK THE OIL LEVEL AND ADD OIL AS NEEDED. BEFORE STARTING THE COMPRESSOR, CHECK THE OIL LEVEL.	ANTES DE OPERAR, REVISAR EL NIVEL DE ACEITE Y AÑADIR ACEITE SI ES NECESARIO. ANTES DE ENCENDER EL COMPRESOR, REVISAR EL NIVEL DE ACEITE.	AVANT D'UTILISER, VÉRIFIER LE NIVEAU D'HUILE ET AJUSTER SI BESOIN. AVANT DE METTRE LE COMPRESOR EN MARCHÉ, VÉRIFIER LE NIVEAU D'HUILE.
WARNING	ADVERTENCIA	AVERTISSEMENT																				
BEFORE HANDLING, REFER TO THE USER MANUAL FOR SAFETY AND MAINTENANCE INFORMATION. ALWAYS WEAR APPROPRIATE PROTECTIVE EQUIPMENT. BEFORE PROTECTIVE HAZARDS SUCH AS ELECTRICAL SHOCK OR MOVING PARTS. READ THE USER MANUAL CAREFULLY BEFORE USING THE COMPRESSOR.	ANTES DE MANEJAR, LEA EL MANUAL DEL USUARIO PARA OBTENER LA INFORMACIÓN DE SEGURIDAD Y MANTENIMIENTO. ANTES DE PROTECTORES PELIGROSOS COMO LA ELECTRICIDAD O PARTES EN MOVIMIENTO. LEA EL MANUAL DEL USUARIO CUIDADOSAMENTE ANTES DE USAR EL COMPRESOR.	AVANT D'UTILISER LE COMPRESOR, LIREZ LA MANUELLE D'INSTRUCTIONS POUR OBTENIR LES INFORMATIONS DE SECURITE ET D'ENTRETIEN. AVANT DE PROTECTEURS DANGERS TEL QUE LE CHOC ELECTRIQUE OU LES PARTIES EN MOUVEMENT. LIJREZ LE MANUEL D'UTILISATEUR ATTENTIVEMENT AVANT D'UTILISER LE COMPRESOR.																				
DO NOT OPERATE THE COMPRESSOR IN THE FOLLOWING SITUATIONS: 1. DO NOT OPERATE THE COMPRESSOR IN AN UNVENTILATED AREA. 2. DO NOT OPERATE THE COMPRESSOR IN A CORRUPTIBLE ENVIRONMENT. 3. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF EXPLOSION. 4. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FLOODING. 5. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF COLLAPSE. 6. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIRE. 7. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF LIGHTNING. 8. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF HAIL. 9. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF ICE. 10. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF WIND. 11. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF SAND. 12. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF DUST. 13. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIBERS. 14. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF TOXIC SUBSTANCES. 15. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF CORROSIVE SUBSTANCES.	NO OPERAR EL COMPRESOR EN LAS SIGUIENTES SITUACIONES: 1. NO OPERAR EL COMPRESOR EN UN AREA SIN VENTILACION. 2. NO OPERAR EL COMPRESOR EN UN ENTORNO CORRUPTIBLE. 3. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE EXPLOSION. 4. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE INUNDACION. 5. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE COLAPSO. 6. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FUEGO. 7. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE RAYOS. 8. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE GRANIZO. 9. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE NIEVE. 10. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE VIENTO. 11. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE ARENA. 12. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE POLVOS. 13. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FIBRAS. 14. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS TOXICAS. 15. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS CORROSIVAS.	NE PAS UTILISER LE COMPRESOR DANS LES SITUATIONS SUIVANTES: 1. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT NON VENTILE. 2. NE PAS UTILISER LE COMPRESOR DANS UN ENVIRONNEMENT CORRUPTIBLE. 3. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'EXPLOSION. 4. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INONDATION. 5. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE CHUTE. 6. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INCENDIE. 7. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE Foudre. 8. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE GRANDIN. 9. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE NEIGE. 10. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE VENT. 11. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SABLE. 12. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE POUSSIERE. 13. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE FIBRES. 14. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUBSTANCES TOXIQUES. 15. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUBSTANCES CORROSIVES.																				
DO NOT OPERATE THE COMPRESSOR IN THE FOLLOWING SITUATIONS: 1. DO NOT OPERATE THE COMPRESSOR IN AN UNVENTILATED AREA. 2. DO NOT OPERATE THE COMPRESSOR IN A CORRUPTIBLE ENVIRONMENT. 3. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF EXPLOSION. 4. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FLOODING. 5. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF COLLAPSE. 6. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIRE. 7. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF LIGHTNING. 8. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF HAIL. 9. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF ICE. 10. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF WIND. 11. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF SAND. 12. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF DUST. 13. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIBERS. 14. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF TOXIC SUBSTANCES. 15. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF CORROSIVE SUBSTANCES.	NO OPERAR EL COMPRESOR EN LAS SIGUIENTES SITUACIONES: 1. NO OPERAR EL COMPRESOR EN UN AREA SIN VENTILACION. 2. NO OPERAR EL COMPRESOR EN UN ENTORNO CORRUPTIBLE. 3. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE EXPLOSION. 4. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE INUNDACION. 5. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE COLAPSO. 6. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FUEGO. 7. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE RAYOS. 8. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE GRANIZO. 9. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE NIEVE. 10. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE VIENTO. 11. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE ARENA. 12. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE POLVOS. 13. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FIBRAS. 14. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS TOXICAS. 15. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS CORROSIVAS.	NE PAS UTILISER LE COMPRESOR DANS LES SITUATIONS SUIVANTES: 1. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT NON VENTILE. 2. NE PAS UTILISER LE COMPRESOR DANS UN ENVIRONNEMENT CORRUPTIBLE. 3. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'EXPLOSION. 4. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INONDATION. 5. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE CHUTE. 6. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INCENDIE. 7. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE Foudre. 8. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE GRANDIN. 9. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE NEIGE. 10. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE VENT. 11. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SABLE. 12. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE POUSSIERE. 13. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE FIBRES. 14. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUSTANCIAS TOXIQUES. 15. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUSTANCIAS CORROSIVES.																				
BEFORE OPERATING, CHECK THE OIL LEVEL AND ADD OIL AS NEEDED. BEFORE STARTING THE COMPRESSOR, CHECK THE OIL LEVEL.	ANTES DE OPERAR, REVISAR EL NIVEL DE ACEITE Y AÑADIR ACEITE SI ES NECESARIO. ANTES DE ENCENDER EL COMPRESOR, REVISAR EL NIVEL DE ACEITE.	AVANT D'UTILISER, VÉRIFIER LE NIVEAU D'HUILE ET AJUSTER SI BESOIN. AVANT DE METTRE LE COMPRESOR EN MARCHÉ, VÉRIFIER LE NIVEAU D'HUILE.																				
DO NOT OPERATE THE COMPRESSOR IN THE FOLLOWING SITUATIONS: 1. DO NOT OPERATE THE COMPRESSOR IN AN UNVENTILATED AREA. 2. DO NOT OPERATE THE COMPRESSOR IN A CORRUPTIBLE ENVIRONMENT. 3. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF EXPLOSION. 4. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FLOODING. 5. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF COLLAPSE. 6. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIRE. 7. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF LIGHTNING. 8. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF HAIL. 9. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF ICE. 10. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF WIND. 11. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF SAND. 12. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF DUST. 13. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF FIBERS. 14. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF TOXIC SUBSTANCES. 15. DO NOT OPERATE THE COMPRESSOR IN AN AREA WITH A RISK OF CORROSIVE SUBSTANCES.	NO OPERAR EL COMPRESOR EN LAS SIGUIENTES SITUACIONES: 1. NO OPERAR EL COMPRESOR EN UN AREA SIN VENTILACION. 2. NO OPERAR EL COMPRESOR EN UN ENTORNO CORRUPTIBLE. 3. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE EXPLOSION. 4. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE INUNDACION. 5. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE COLAPSO. 6. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FUEGO. 7. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE RAYOS. 8. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE GRANIZO. 9. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE NIEVE. 10. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE VIENTO. 11. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE ARENA. 12. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE POLVOS. 13. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE FIBRAS. 14. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS TOXICAS. 15. NO OPERAR EL COMPRESOR EN UN AREA CON RIESGO DE SUSTANCIAS CORROSIVAS.	NE PAS UTILISER LE COMPRESOR DANS LES SITUATIONS SUIVANTES: 1. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT NON VENTILE. 2. NE PAS UTILISER LE COMPRESOR DANS UN ENVIRONNEMENT CORRUPTIBLE. 3. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'EXPLOSION. 4. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INONDATION. 5. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE CHUTE. 6. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE D'INCENDIE. 7. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE Foudre. 8. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE GRANDIN. 9. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE NEIGE. 10. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE VENT. 11. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SABLE. 12. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE POUSSIERE. 13. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE FIBRES. 14. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUSTANCIAS TOXIQUES. 15. NE PAS UTILISER LE COMPRESOR DANS UN ENDROIT A RISQUE DE SUSTANCIAS CORROSIVES.																				
BEFORE OPERATING, CHECK THE OIL LEVEL AND ADD OIL AS NEEDED. BEFORE STARTING THE COMPRESSOR, CHECK THE OIL LEVEL.	ANTES DE OPERAR, REVISAR EL NIVEL DE ACEITE Y AÑADIR ACEITE SI ES NECESARIO. ANTES DE ENCENDER EL COMPRESOR, REVISAR EL NIVEL DE ACEITE.	AVANT D'UTILISER, VÉRIFIER LE NIVEAU D'HUILE ET AJUSTER SI BESOIN. AVANT DE METTRE LE COMPRESOR EN MARCHÉ, VÉRIFIER LE NIVEAU D'HUILE.																				

AIR COMPRESSOR

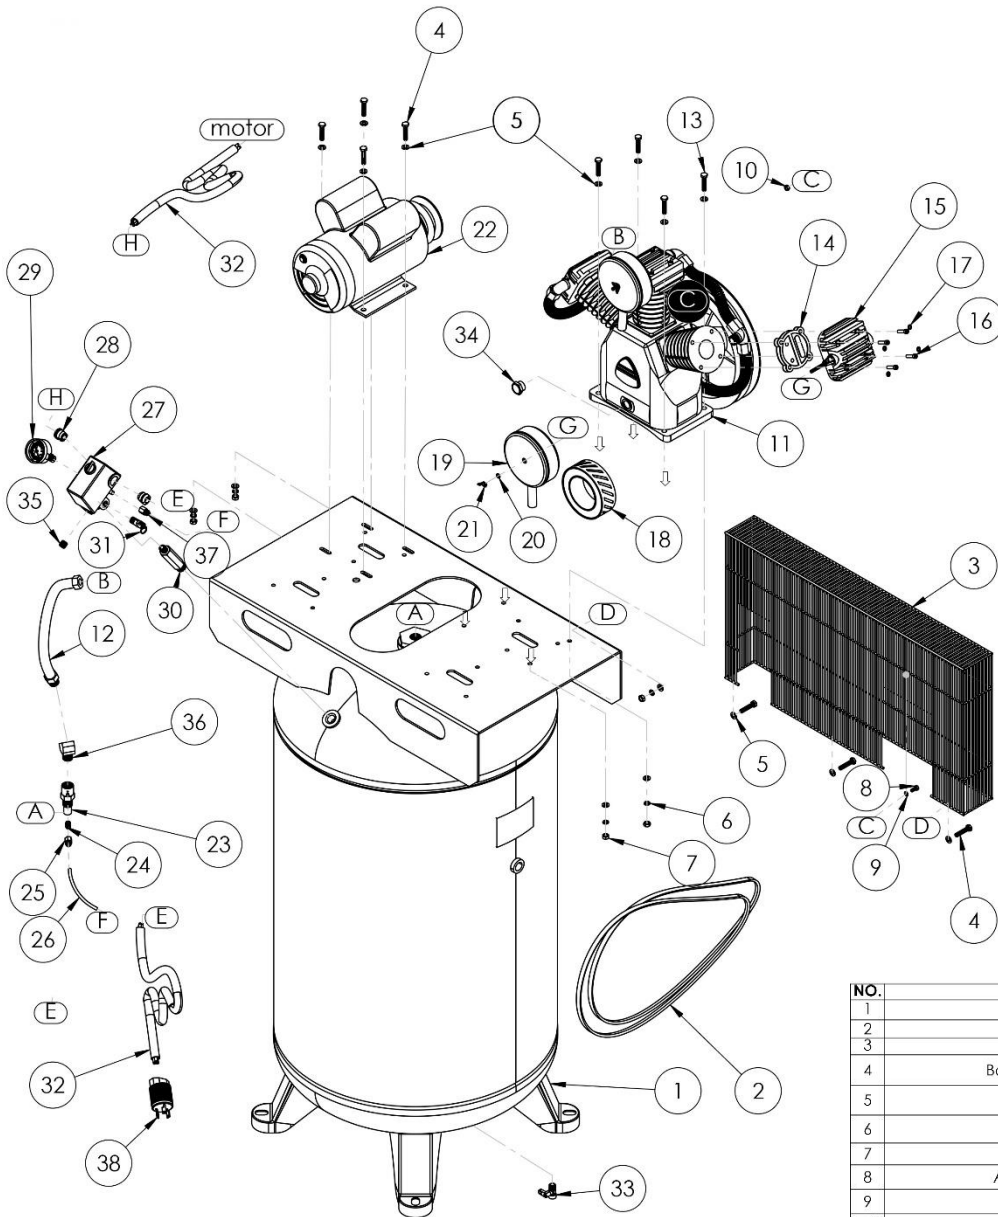

NO.	Description	Part Number	Qty.
1	80 gal. Steel Tank	91438	1
2	Belt A-56	289701	2
3	Pulley Belt Guard	91476	1
4	Bolt 5/16" X 1" Galvanized	280611	7
5	Flat Washer 5/16"	280631	22
6	Lock Washer 5/16"	280281	11
7	Nut 5/16"	280621	11
8	Allen Screw M6 x 20mm	281361	1
9	Flat Washer M6	282011-GA	1
10	Lock Nut M6	281201	1
11	Oil Lubricated Air Compressor - 3 pistons	91444	1
12	1/2"NPT Hose - 3/4-16UNF 11" LONG	91473	1
13	Bolt 5/16X1 1/2" Galvanized	280151	4
14	Valve Plate	Oil Pump Parts	3
15	Head Cap		3
16	Head Screw		12
17	Head Washer		12
18	Air Filter		3
19	Air Filter Case		3
20	Air Filter Washer		3
21	Wing Nut		3
22	5 Hp Motor	91435	1
23	Check Valve In Tank 1/2"x1/2" NPT	91451	1
24	Brass Nipple 1/8" NPT	289461	1
25	Hose Nut Connector 6mm x M10	90728	1
26	Relief PU Hose x 6mm	180431	1
27	Pressure Switch, 125-155 PSI	90393	1
28	Strain Relief 8N-2	91292	2
29	Pressure Gauge 0-350 PSI	91340	1
30	Pipe 3/8"x1/4"NPT x 4"	91061	1
31	Safety Valve 200 PSI	91341	1
32	10 AWG Power Cord / Motor Power Cord	181471	7 ft/2ft
33	Drain Valve	90343	1
34	Oil Sight Glass	91436	1
35	Opressor Allen 1/4"NPT	281451	1
36	Elbow 45° 1/2"NPT FxM	91474	1
37	Hose Nut Connector 6mm x M11	90729	1
38	Power Cord Plug NEMA L6-30P	91331	1

PRE-OPERATION CHECKLIST

Package Contents & Assembly

Model: 80050BD

Package contents:

Air Compressor
Owner's Manual

Assembly:

To secure compressor, bolt to floor surface via bottom feet/pads.


NOTE 1: Air Filters are already pre-installed (2 total)

NOTE 2: An air output BALL VALVE, 1/2" NPT or similar will need to be installed to allow for connection of air hose/line to air compressor. Part Number 90817 is available separately from California Air Tools.



Close Manual Ball Drain Valve:

1. Ensure the Manual Ball Drain Valve is closed prior to turning the air compressor on.

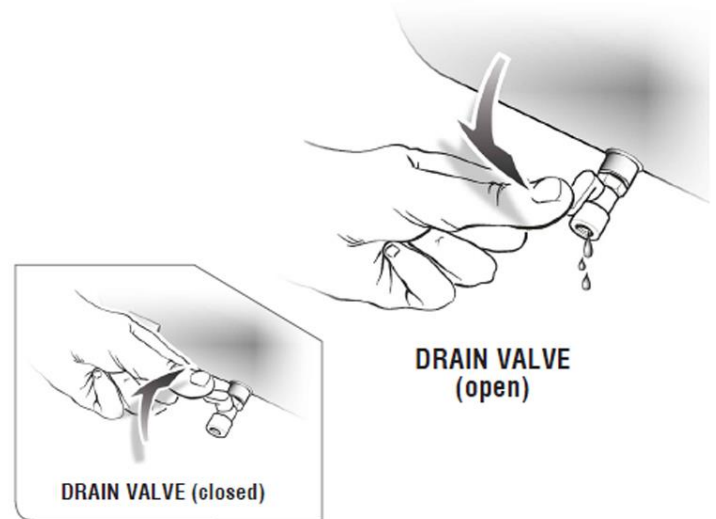

NOTE: To drain the air tank, turn the ball valve lever to be inline with tubing; water/air will eject from valve opening.



Inspect for Damage

Before using the air compressor, make sure the air tank is not damaged, inspect all parts for damage, and check that all pipes are firmly connected.

Do not use the air compressor if any damage is found. If damaged, have an authorized service center inspect and test the air compressor to ensure that it is working properly.

Save Packaging

IMPORTANT: Save all outside packaging in case you ever need to return the product for service or repair.

Compressor Location


Use on Flat Surface


For optimum operation, the air compressor should be placed on a flat surface for best and safer operation.

Maintain a Clear Area

It is very important that the air compressor is positioned so that there is adequate airflow around the machine. There must be at least 2 feet of obstacle-free space surrounding and above the air compressor.

⚠ WARNING


EXPLOSION


FIRE

Use caution to minimize risk of fire or explosion.


It is normal for the air compressor motor and pressure switch to produce sparks while operating. If sparks come in contact with vapors from gasoline or solvents, they may ignite and cause a fire or explosion.

Abrasive tools such as grinders, drills and other tools are capable of making sparks that can ignite flammable materials.

Always operate the air compressor a safe distance away from flammable items. Use in well-ventilated areas.

Never exceed the maximum rated pressure.

⚠ WARNING


RISK TO BREATHING

Dust or dust-like particulates caused by power-sanding, sawing, grinding, drilling or any other construction-like activities can contain contaminants that are harmful to breathe.

Always use your air compressor in a well-ventilated and clean area.

Never breathe the air that comes directly out of the air compressor or air hose. This air is not suitable for breathing.

Always wear approved safety equipment. When performing dust-creating activities, securely wear properly-fit face masks or respirators.

If you feel ill from breathing while operating your air compressor, stop and seek medical attention immediately.

Use in Areas with Clean Air

For proper operation and to maximize the longevity of the air compressor, it is very important that the air drawn into the air compressor is clean. The air compressor should not be used in areas where dust or particulates are in the air. This will damage the motor and impair proper operation.

IMPORTANT: Always use with the 2 air filters properly installed.

Electrical Power

Electrical Power Requirements

Before using the air compressor, refer to the serial label for voltage and amperage requirements. Make sure you have a sufficient electrical supply for supporting the motor's requirements.

⚠ DANGER



SHOCK

There is a danger of electric shock.

Use only undamaged electrical cords.

DO NOT touch bare wires or receptacles.

DO NOT operate air compressor in wet weather or in wet conditions.

DO NOT touch air compressor or cords if hands or feet are wet.

Ensure that all cords are free of damage before connecting to the power supply.

Ensure that you have a sufficient electrical supply for supporting the requirements of the motor.

Improper installation of the grounding plug is able to result in a risk of electric shock. When repair or replacement of the cord or plug is required, do not connect the grounding wire to either flat terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

This product must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electric current.

This product is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with the local codes and ordinances.

Use a dedicated 30 Amp Circuit: **208 Volt** (200v-216v) or **230 Volt** (220v-240v) / 60 Hertz / Single Phase.

Low voltage and/or an overload circuit can cause the motor's overload protection system circuit breaker to trip. Press the RESET button on motor.



Electrical Extension Cords

⚠ CAUTION

Use caution when using extension cords.

Use an extension cord which is no more than 25' (7.6 m) long and at least 14 gauge.

Using an excessively long or thin-wired extension cord will cause severe damage to the motor.

Use only a 3-wire extension cord that has a 3-blade grounding plug.

As undersized cord results in a drop in the line voltage and loss of power and overheating.

When in doubt, use a heavier gauge. The smaller the gauge the more current the cord can carry.

Inspect all electrical extension cords to ensure that they are free of damage.

OPERATING THE AIR COMPRESSOR

⚠ WARNING

This manual contains important instructions for operating this product. For your safety, and the safety of others, be sure to read this manual thoroughly before operating the product.

Failure to properly follow all the instructions and precautions can cause you and others to be seriously hurt or killed.

Save this manual for future reference.

Introduction

This air compressor features a compact structure, stable performance, a high airflow rate, easy operation and maintenance. Because the air compressor produces no oil in the airflow, it can be used as an independent air supply machine for situations in which oil in the airflow is an issue. The motor directly drives the pistons and is able to function without lubrication for a long period of time.


Assembly

1. Connect your air supply hose to the air output port. NOTE: 1/2" NPT valve is not included but is available separately (P/N 90817). Make sure the Manual Ball Drain Valve is off and that the pressure switch is in the OFF position.
1. Ensure that the power supply you are going to use is operating normally. **208 Volt (200v-216v) to 230 Volt (220v-240v) / 60 Hertz / Single Phase**
2. Insert the power supply cord into the power supply socket.

Test Run

Before using the air compressor for the first time, complete a test run as follows:

1. Turn the power switch to the OFF position. Plug the power supply cord into a power supply socket. Start the air compressor by turning the power switch to the AUTO position. The pressure gauge reading will slowly rise as pressure increases inside the air tank. When the gauge reading reaches 165 PSI (plus or minus 5 PSI), the pressure switch will automatically turn the power off. This indicates the compressor is working normally.

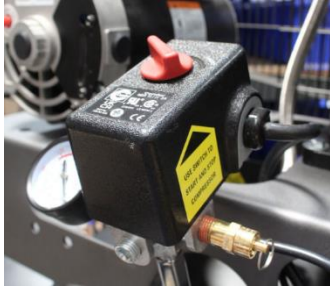

2. Turn the power switch to the Off position, unplug the power supply cord and release the air in the air tank by opening the drain valve at the bottom of the tank. At this point proceed to the next step (daily operations).

Note: If the Air Compressor is not working properly, the pressure gauge will indicate that there is a decrease in pressure in the air tank. If there is an air leak from the compressor the pressure in the air tank decreases, the pressure switch resets and the motor automatically turns back on.

If you detect an air leakage, turn the power switch to the Off position, release the air from the tank by opening the Manual Ball drain valve at base of unit. Unplug the power supply cord and contact Customer Support.

Daily Operation

Starting the compressor:

1. Turn the power switch to the OFF position.
2. Attach the air hose to 1/2" Air Output fitting – not included (*ball valve, 1/2" NPT, P/N 90817 available separately*).
3. Close the manual ball drain valve.
4. Plug the power supply cord into a power supply socket.
5. Check Oil Level before starting the compressor.
6. Turn the power switch to the AUTO position.
7. Let the motor run and tank fill until motor turns off.
8. To regulate the output air flow:
Optional 135 PSI output regulator sold separately.
9. Operate air tool normally.

Shutting down the compressor:

1. Turn the power switch to the OFF position.
2. Unplug the power supply cord.
3. Remove the pressure and water in the air tank through manual drain valve.

⚠ WARNING



FLYING OBJECTS

Flying object can cause injury to the eyes, head and other parts of the body.

Air-powered equipment and power tools are capable of propelling items (metal chips, fasteners and particulates) at high speed into the air and could result in injury.

Always wear approved head and eye protection.

Never point the air stream at any part of the body, or at another person or animal.

When operating the air compressor, make sure all other people and animals maintain a safe distance.

Do not move the air compressor when the air tank is under pressure.

Never use the air hoses to pull or move the air compressor.

Keep the air compressor on a flat surface.

⚠ WARNING



HOT SURFACE



FIRE

Air compressor surfaces become hot during operation.

DO NOT touch hot surfaces, because they can cause severe burns.

Do not touch the air compressor's cylinder head. During operation, the cooling fins of the cylinder head and delivery pipe become hot.

Allow the air compressor to cool before touching it.

DO NOT place a storage cover on the unit during operation. Only place a cover on the air compressor after it has thoroughly cooled down.

QUICK GUIDE

1. Check the oil level.
2. Connect the equipment to a suitable electrical outlet.
3. Verify that the breather cap and filters are properly positioned.
4. Turn the automatic head knob to start operation.
5. When the compressor reaches 155 PSI it will stop operating.

**CHECK THE OIL LEVEL
BEFORE STARTING
THE COMPRESSOR**

MAINTENANCE

Draining the Air Tank

The frequency at which you should drain the air tank depends on the environmental conditions and the amount of operating time logged. The average draining frequency is every 1 to 2 days, depending on compressor usage.

1. Place the air compressor above a container capable of holding water.
2. With compressed air in the air tank, slowly turn the drain valve knob to the forward (open) or straight (in-line) position. The water in the air tank will drain out.
3. After all of the accumulated water has drained out, turn the drain valve knob to the closed or 90-degree position in order to avoid air/water leakage.
4. Draining the air tank protects parts from rust and corrosion.

Cleaning or Changing the Air Filter

The 2 air filters are designed to reduce noise and help prevent particulates in the air from entering and damaging the air compressor.

After being used for a period of time, the air filter will become clogged. This will reduce the air intake capabilities of the air compressor, reducing performance. Therefore, the air filter must be cleaned or replaced regularly.

1. Open the lid on the air filter, then remove the air filter element.
2. To clean the element blow off or brush off the dirt and dust.
3. If clogged, replace with a new air filter.

Testing for Leaks

Make sure all connections are tight. Do not overtighten.

A small leak in any hose or pipe connection will reduce the air compressor's performance.

To test for small leaks, spray a small amount of soapy water on the area suspected of leaking. If the soap bubbles, replace the broken part.

Cleaning

Clean items with a soft brush, or wipe with a moistened cloth using a biodegradable solvent.

Do not use flammable liquids such as gasoline or alcohol. Always keep parts clean from dirt and dust for better performance.

Pressure Switch

The pressure switch is factory pre-set to shut off at 165 PSI (plus or minus 5 PSI) and to re-start at 135 PSI (plus or minus 5 PSI)

Service/Maintenance

Replace pump oil every 500-800 operating hours. Oil Type ISO 68 (LDAB68). Oil Level Indicator should be checked prior to each use to ensure an adequate level of oil is always present in pump or damage to pump may result.




Single Stage Pump (3 cylinders) has an estimated 5000 to 10000 operating hour life. Visit CaliforniaAirTools.com Maintenance-Troubleshooting page for more information.

STORAGE

Before storing for a prolonged period of time:

1. Turn off the power supply.
2. Disconnect the power cord from the power supply and wrap the power cord around the air compressor handle to reduce the risk of damage.
3. Open drain valve to release any water and air.
4. Cover the air compressor with a cover to protect the unit from dust and moisture. Store Indoors.
5. Do not stack or store any items on top of or around the air compressor. Damage could occur.

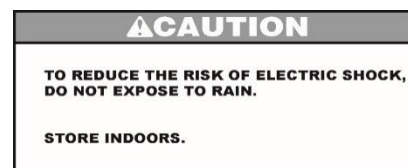


TROUBLESHOOTING


PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTIONS
Pressure drop in the tank.	Air leaks at connections.	Let the compressor build pressure in the tank, to the maximum pressure if possible. Brush soapy water on air connections and look carefully for air bubbles. Tighten leaky connections. If the problem persists, contact the seller for further advice.
The unloader valve leaks when the compressor is idle.	Unloader valve seal is defective.	Let the air in the air tank flow out until all the pressure is released. Then remove the unloader valve plug and clean the valve seal. If necessary, replace the seal and then reinstall all components.
The compressor stopped and does not start.	The thermal protector turned on because the motor is overheating.	Check that the main voltage corresponds to the air compressor specifications. An extension cord that is too thin or too long can cause a voltage drop and cause the motor to overheat. Excessive use (over 10 hours continuous use) can cause the motor to overheat Allow the motor to cool down; press RESET switch on motor as necessary.
	Motor windings are burned out.	Contact Customer Support.
The motor does not start and makes a humming noise.	Head Pressure	Do a Check Valve Adjustment. Drain air tank. Remove check valve cap Take out check valve spring Clean inside the check valve and elongate the spring. Replace spring and cap
	Low voltage supply to the motor. (see below)	
The motor does not start or starts slowly.	Low voltage supply to the motor.	Check that the main voltage corresponds to the air compressor specifications. An extension cord that is too thin or too long can cause a voltage drop.. Use heavy duty extension cords. Ensure that the air compressor is plugged into a fully functional power outlet
The compressor is noisy with metallic clangs.	Compressor head gasket or reed valve is damaged	Stop the compressor and contact the dealer.
The compressor does not reach the maximum pressure.	Compressor head gasket or reed valve is faulty.	Stop the compressor and contact the dealer.
The compressor doesn't seem to provide as much air as it did when new and/or the compressor cuts off within a much shorter time period.	The pressure switch needs adjusting.	Stop the compressor and contact the dealer.
	The tank is full of water due to condensation.	Open the drain valve and release the water from the tank.
The motor pump unit does not stop when the tank pressure reaches its maximum working pressure (165 PSI).(plus or minus 5 PSI)	Pressure switch defective or needs adjusting.	Stop the compressor immediately and contact Customer Support.

SPECIFICATIONS

Electrical Circuit (generic)

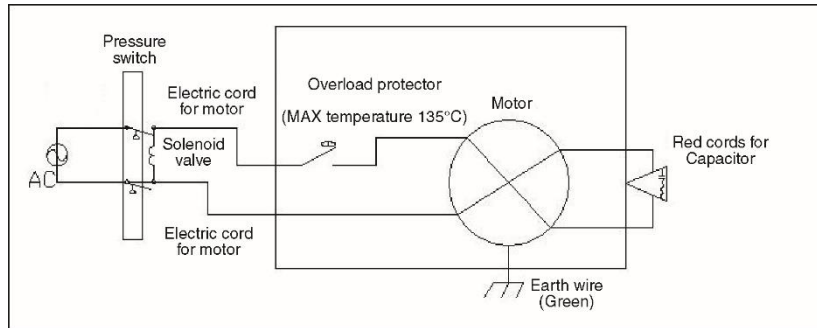

Air Passage Drawing (generic)

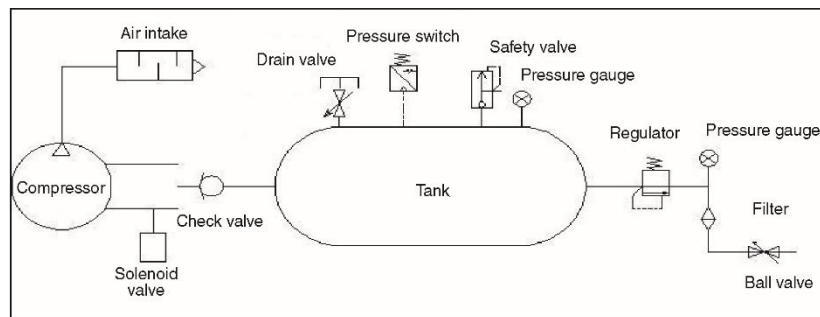

CALIFORNIA AIR TOOLS INC. LIMITED WARRANTY

This warranty is limited to Air Compressors distributed by:

California Air Tools, Inc.
8560 Siempre Viva Road
San Diego, CA 92154

Limited Warranty

2 Year Limited Warranty on Pump; **1 Year** Limited Warranty on all other components.

California Air Tools Inc. will repair or replace, free of charge, to the original retail customer who purchased a California Air Tools, Inc. Air Compressor from an authorized dealer, distributor or distributor's dealer in North America.

This warranty does not transfer to subsequent owners.

California Air Tools Inc. will repair or replace, at its option, any parts of the portable air compressor that are proven by an authorized service center to be defective in material or workmanship under normal use during the applicable warranty time period as stated below. This limited warranty covers the cost of the replacement parts and labor for all defects when installed by an authorized service center. Transportation charges are the responsibility of the customer. Any part replaced under warranty becomes the property of California Air Tools Inc.

All parts replaced under warranty will be considered as part of original product, and any warranty on those parts will expire coincident with the original product warranty.

Limited Warranty Periods

Non-commercial / Non-rental (personal use by a retail customer): 1 year parts and labor
Commercial / Rental (usage for income, business use): 1 year parts and labor

The limited warranty period begins on the date of retail purchase by the original purchaser.

Disclaimers, Limitations of Remedies & Exclusions

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

Disclaimer of Other Warranties

To the fullest extent permitted by applicable law, this limited warranty is exclusive and expressly in lieu of any and all other warranties, including, without limitation, any implied warranties of merchantability or fitness for a particular purpose or any other implied warranties that may arise from the course of dealing or usage of the trade. California Air Tools Inc. hereby disclaims and excludes all other warranties. To the extent that California Air Tools Inc. products are consumer products under applicable federal and state law with respect to any customer, the duration of any implied warranties (including but not limited to implied warranties of merchantability or fitness for a particular purpose) are limited to the shortest duration permitted by applicable law or the Limited Warranty period provided herein, whichever is longer.

Limitations of Remedies

California Air Tools Inc. shall not be liable to customer, or anyone claiming under customer, for any other obligations or liabilities, including but not limited to, obligations or liabilities arising out of breach of contract or warranty, negligence or other tort or any theory of strict liability, with respect to the air compressor or California Air Tools Inc. acts or omissions or otherwise. To the fullest extent permitted by applicable law, California Air Tools Inc. shall not in any event be liable for incidental, compensatory, punitive, consequential, indirect, special or other damages, including but not limited to loss of use, loss of income, loss of time, loss of sales, injury to personal property, or liability customer incurs with respect to any other person, or any other type or form of consequential damage or economic loss.

Exclusions

In addition to the foregoing disclaimers, limitations and terms, this limited warranty shall not apply to and does not cover accessories, nor does it cover products that are in any way subject to any of the following:

1. Improper setup, installation or storage.
2. Lack of proper maintenance and service.
3. Accident, damage, abuse or misuse.
4. Abnormal operating conditions or applications.
5. Repair or modification by customer or any third party without written consent of California Air Tools Inc.
6. Use under operating conditions or in applications not recommended by California Air Tools Inc.
7. Normal wear.
8. The use of accessories or attachments not recommended by California Air Tools Inc.
9. Acts of God.

The application of these exclusions will be determined at the sole discretion of California Air Tools Inc.

Maintenance & Troubleshooting Guide

California Air Tools provides Maintenance & Troubleshooting Guide on our website WWW.CALIFORNIAAIRTOOLS.COM.

Valuable information regarding set-up, operation and maintenance.

Please visit our website and view these videos for beneficial information.

Service or Parts

Warranty is also available by keeping and showing your original receipt from the date of purchase to an Authorized California Air Tools Service Center.

For all customer service inquiries call 1-866-409-4581 or visit

WWW.CALIFORNIAAIRTOOLS.COM

Go to the “Contact Us” Tab

Click on “Service & Parts” Buttons for the Fastest Service.

